

>> USER MANUAL <<



PROTO

SHENZHEN JASSWAY INFOTECH CO., LTD

Disclaimer

- ✓ Please read the instructions carefully before equipment installation and using the device.
- ✓ Do not put the product in high temperature, humid or dusty environment.
- ✓ Do not drop, crash or break down this product.
- ✓ Do not power off the device when it's formatting or upgrading, otherwise it will cause operation system error.
- ✓ Use only approved add-on enhancements.

Content

Product Description	1
Hardware Instruction	2
Installation	3
Getting started	3
Accessory & Installation	3
How to download/use APPs.....	3
Warranty Notice	6

 
 
 
Product Description

The Jassway Proto POS System Series with a new Simply & Ultra Slim Design for today's retail and hospitality environments. An handy optional customer display, and a refined base that meets the most complex needs of the modern and essential design. An innovative technology that reduces the amount of the space needed and in the mean time improves the efficiency of the cash point, by optimizing the timing related to work and sales, and therefore of the shopping experience too.

Overview – Specifications

SYSTEM	
Processor	RK3568 ARM Cortex-A55 Quad-Core, 2.0GHz
Memory	4GB DDR3
Storage	32GB EMMC
OS	Android 11
DISPLAY	
Type	15.6" LED Backlight Display
Resolution	1366*768
Brightness	220cd/m ²
Viewing Angle(CR≥10)	90 Degree(H)
	60 Degree(V)
Touchscreen	Projective Capacitive Touch Screen
INTERFACE	
USB	1*USB2.0, 1*USB3.0 OTG
LAN	1*Gigabit Ethernet, RJ45
Audio	1*3.5mm Audio Jack
Display	1*HDMI
TF Card	Support up to 128GB
Button	1*Uboot Key
Power DC-IN	Input AC 100~240V/50~60hz, Output DC12V/5A
PHYSICAL&ENVIRONMENTAL	
Operating Temperature	Operating -20~70°
Storage Temperature	Storage -25°~75°
Packing Dimensions(W×H×D)	480 x 270 x 440(mm)
Packing Weight	6.26KG
Color	Black
VESA	75*75mm
Built-in Functions	
WIFI	IEEE 802.11 b/g/n /ac(2.4Ghz)
Bluetooth	Bluetooth 4.2

Hardware Instruction

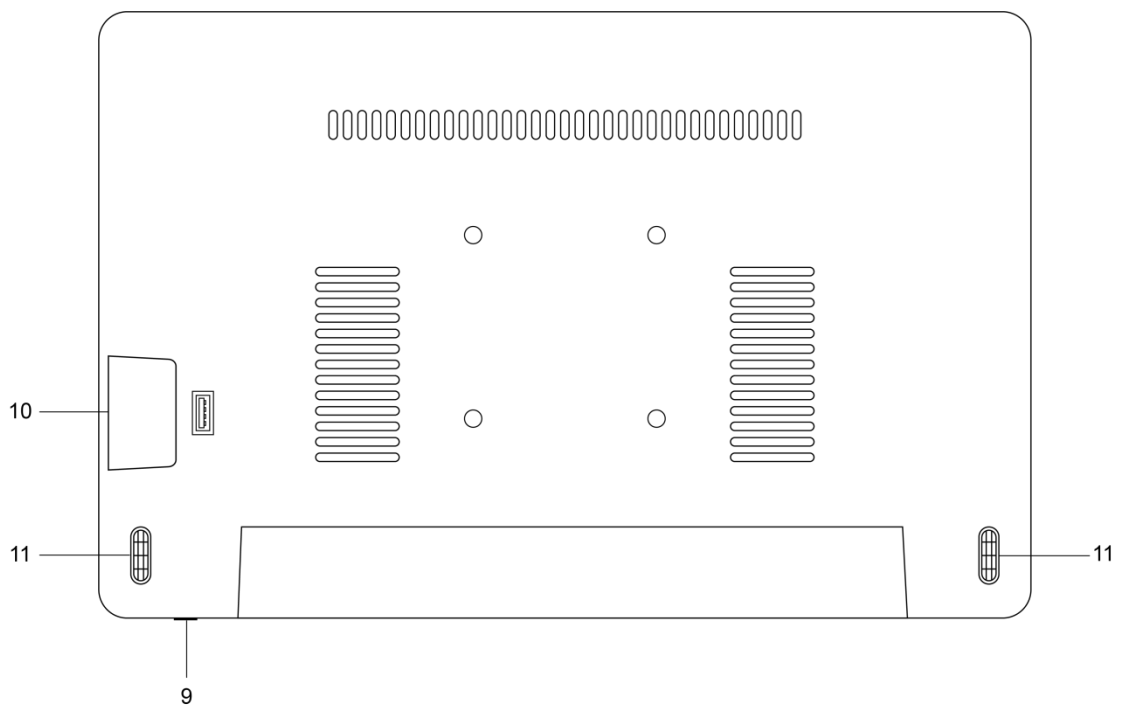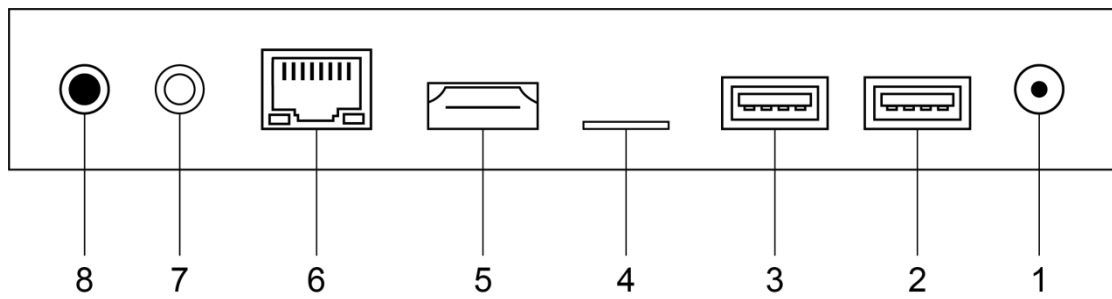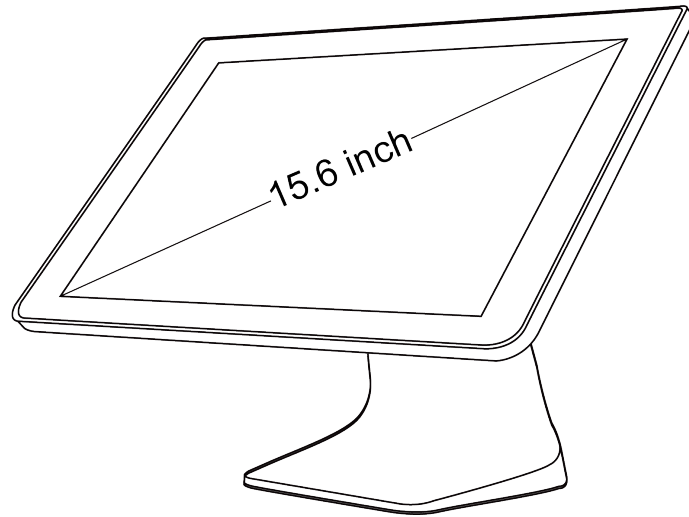

1. DC12V Input
2. USB2.0
3. USB3.0
4. TF Card Slot
5. HDMI Out
6. Ethernet
7. 3.5mm Headphone Jack
8. Uboot Key
9. Power Button
10. MSR Slot
11. Speaker

Installation

Unpacking Verify that the box contains:

- Proto Android terminal
- Power adapter
- Regional Specific power cord

Remove all protective materials from the device.

Inspect the device for any damage during shipment.

Contact us immediately if system has damage and/or missing items as listed above, keep the shipment carton for logistics claim.

Getting started

1. Pull out IO cover to connect power adapter and needed cables and then install IO cover back.
2. Place power adapter carefully and prevent it from dropping.
3. Close the IO cover back with all necessary cables (LAN cable, printer cable, etc) connected.
4. Connect power cord with power source, system will boot automatically when it is supplied with Power for the first time.

Accessory & Installation

MSR card reader installation

1. Pull out cover of MSR card reader from the system
2. Connect the cable of MSR card reader to the reserved connector and make sure it is inserted properly.
3. Fix MSR with 2 screws provided.
4. Install MSR cover back and test the MSR.

How to download/use APPs

Relevant Apps can be downloaded while the network is connected. Open the Google Play store, and login with your account, search and download the App to complete the installation.

To inquire detailed information of the above software:

 
 
select "settings -> application", and select corresponding software to inquire its information;

how to uninstall the software:

select "settings -> application -> application management -> uninstall" to uninstall the application; or press the icon and drag it into the trash can to uninstall it.

Developer Option



Developer Option is hidden in default. To enable it, please Click "Settings" and choose "About tablet", Quick tap "Build number" tab for 7 times to activate Developer Option.

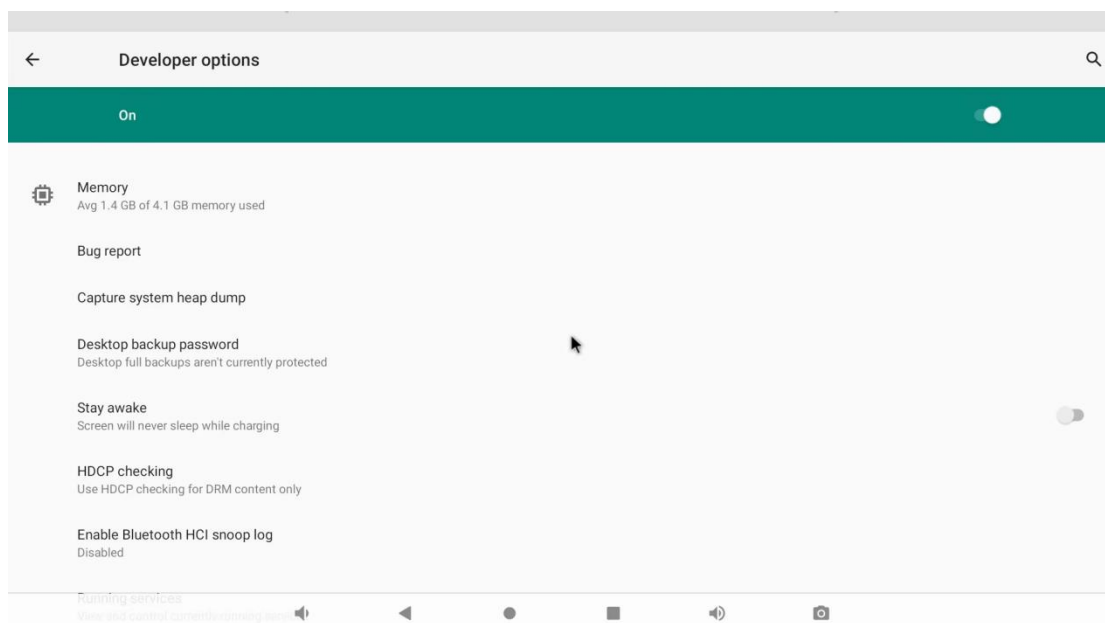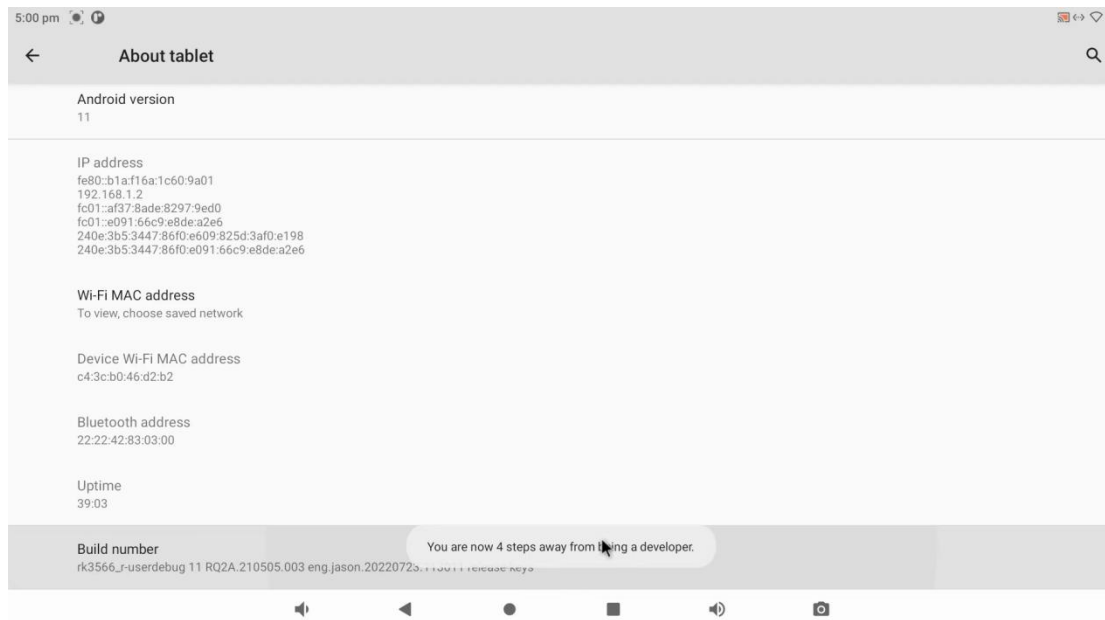

Reset to Factory Default

Please make sure to back up the important data before resetting the device.

  Click "Settings" and select "Backup & reset", choose "Delete All data (factory reset)" to erase everything and reset system to factory default status.

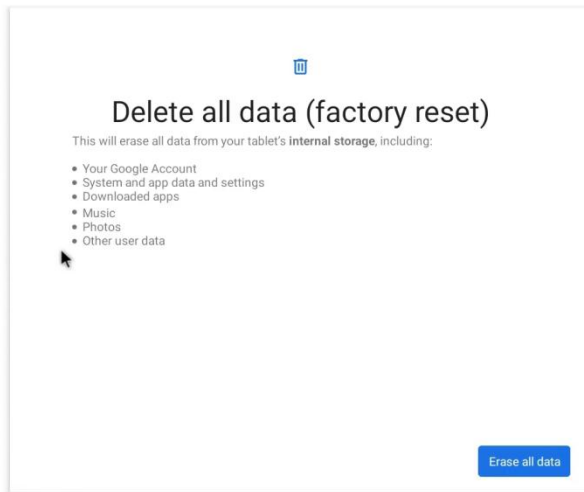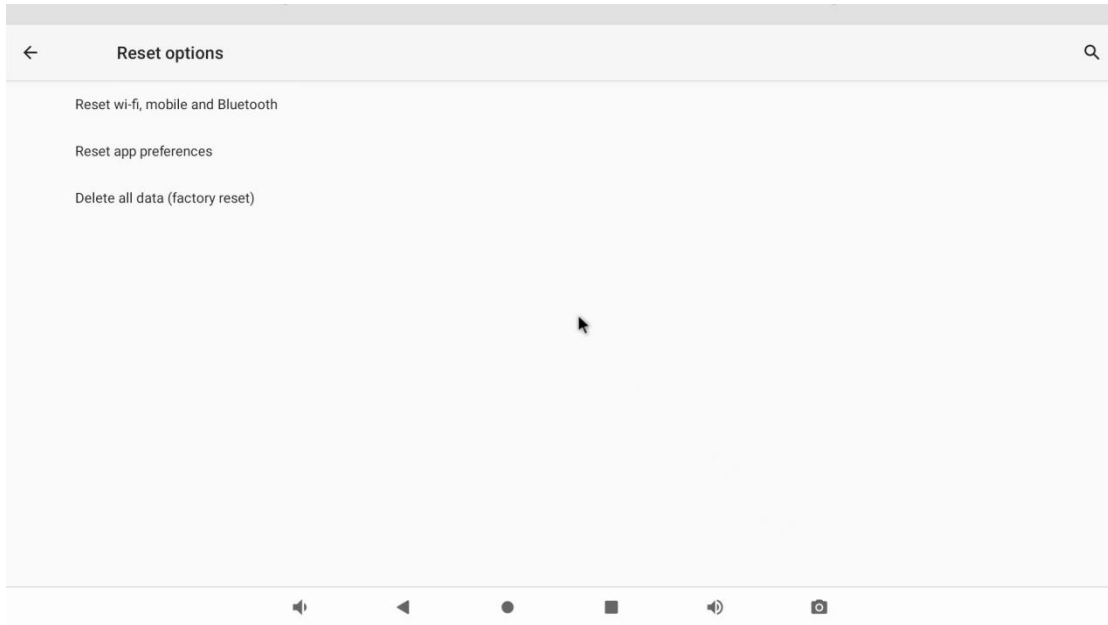

Warranty notice

Thank you for purchasing the company's products! The warranty regulation is formulated hereby in order to protect your legal rights and interest and remove your future worries and improve after-sale service for customers. You are asked to read carefully and propose valuable opinion and suggestion. Respected users:

- I . The company's products enjoy free warranty of 18 months since the Shipment date. If it exceeds the warranty period, reasonable service expense and material cost will be charged.
- II. The product for repair should be packed and transported properly. If there is any damage or loss during the process of transportation, our company will not take responsibility.
- III. Our company has the right to refuse to provide service or charge material and service cost where appropriate with occurrence of the following items within the free warranty period.
 - 1. Product failure or damage caused by improper use of users.
 - 2. The accident of burning caused of electric shock or improper installation.
 - 3. Damage caused by dismantling of non repairmen.
 - 4. The label indicating fragile product is damaged.
- IV. Please read the user manual carefully before the company's product is installed and used.
- V . The warranty card must be stamped with seal and indicate the date by the selling unit to ensure your rights and interest.